


Tabella spessori di serraggio per bulloni a testa esagonale larga

Clamping lengths.

UNI 5712
DIN 6914
passo grosso

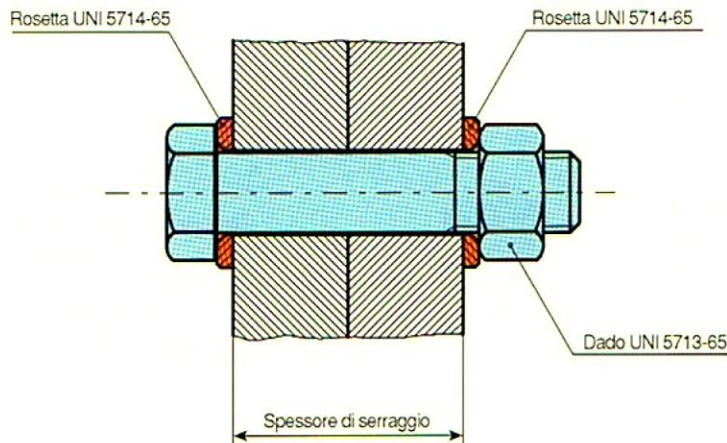

Dimensioni in mm.

d	M 12	M 14	M 16	M 18	M 20	M 22	M 24	M 27
Spessore di serraggio (minimo e massimo)								
L = 30	6 ÷ 10							
35	11 ÷ 14	8 ÷ 12						
40	15 ÷ 19	13 ÷ 15	10 ÷ 14	8 ÷ 12				
45	20 ÷ 24	16 ÷ 20	15 ÷ 19	13 ÷ 17				
50	25 ÷ 29	21 ÷ 25	20 ÷ 23	18 ÷ 22				
55	30 ÷ 34	26 ÷ 30	24 ÷ 28	23 ÷ 27	20 ÷ 24			
60	35 ÷ 38	31 ÷ 35	29 ÷ 33	28 ÷ 32	25 ÷ 29	24 ÷ 28		
65	39 ÷ 43	36 ÷ 40	34 ÷ 38	33 ÷ 37	30 ÷ 34	29 ÷ 33	27 ÷ 31	
70	44 ÷ 48	41 ÷ 45	39 ÷ 43	38 ÷ 40	35 ÷ 39	34 ÷ 37	32 ÷ 36	27 ÷ 31
75			44 ÷ 48	41 ÷ 45	40 ÷ 44	38 ÷ 42	37 ÷ 41	32 ÷ 36
80			49 ÷ 52	46 ÷ 50	45 ÷ 49	43 ÷ 47	42 ÷ 46	37 ÷ 41
85			53 ÷ 57	51 ÷ 55	50 ÷ 53	48 ÷ 52	47 ÷ 50	42 ÷ 46
90			58 ÷ 62	56 ÷ 60	54 ÷ 58	53 ÷ 57	51 ÷ 55	47 ÷ 51
95			63 ÷ 67	61 ÷ 65	59 ÷ 63	58 ÷ 62	56 ÷ 60	52 ÷ 56
100			68 ÷ 72	66 ÷ 70	64 ÷ 68	63 ÷ 67	61 ÷ 65	57 ÷ 61
105			73 ÷ 77	71 ÷ 75	69 ÷ 73	68 ÷ 72	66 ÷ 70	62 ÷ 66
110					74 ÷ 78	73 ÷ 77	71 ÷ 75	67 ÷ 71
115					79 ÷ 83	78 ÷ 82	76 ÷ 80	72 ÷ 76
120					84 ÷ 88	83 ÷ 86	81 ÷ 85	77 ÷ 80
125					89 ÷ 92	87 ÷ 91	86 ÷ 89	81 ÷ 85
130					93 ÷ 97	92 ÷ 96	90 ÷ 94	86 ÷ 90
135							95 ÷ 99	91 ÷ 95
140							100 ÷ 104	96 ÷ 100
145							105 ÷ 109	101 ÷ 105
150							110 ÷ 114	106 ÷ 110
155								111 ÷ 115
160								116 ÷ 120